

Using Axeze KEP-USB-M Readers

If you are using Axeze KEP-USB-M readers for the first time, here are the few things you should know to get the readers working:

- Axeze KEP-USB-M readers use Virtual COM Port (VCP) to communicate with PC.
- Device drivers for VCP must be installed before connecting KEP readers to the PC.
- The download link for latest device drivers for VCP can be found on Axeze web site (www.axeze.com.au) under Support->Drivers.
- For detailed VCP driver installation guidance, download the correct installation guide for your operating system from following link:

<http://www.ftdichip.com/Documents/InstallGuides.htm>

- Follow the instructions and make sure that the drivers are installed successfully.
- If you are using Axeze PCWedge software for keyboard emulation, a help document about using PCWedge with Axeze KEP-USB-M readers can be downloaded from Axeze web site under Support → Downloads (Help Documents section)
- To remove FTDI drivers open the link below and follow the instructions.

<http://www.axeze.com.au/Portals/0/Updating%20FTDI%20%20Virtual%20Com%20Port%20drivers.pdf>

Axeze Pty Ltd

Bowden Railway Station
Station Place
Hindmarsh SA 5007
Australia
Phone: 61 8 8340 8200
Facsimile: 61 8 8340 8211